




TALL UNIT INSTALTION

一. Aecessories:

A-frame 1pc 	B-bottom slide 1pc 	F-screw 4pcs M8*25 	J-L KEY 1PC 
	C-top slide 1pc 	G-gasket 4pcs 	K-Basket mounting bracket 2*n个 
	D-Door connector 2pcs 	H-screw 4pcs M6*20 	L-Basket “n” 
	E-Door fastener 2pcs 	I-screw 34pcs ST4*20 	

(2).cabinet size

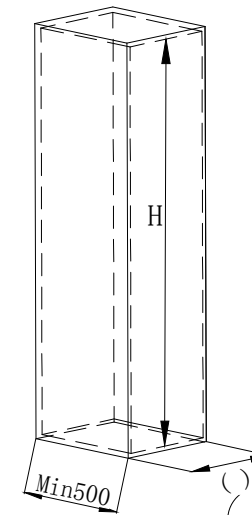

mini inner width : 286mm for 300mm cabinet
mini inner width : 386mm for 400mm cabinet


二. Cabinet size(mm):

(1).product size

cabinet width(mm)	Product size (W*D*H)	“n” QTY of Basket
300	240*474*(1300-1599)	4
	240*474*(1600-1899)	5
	240*474*(1900-2200)	6
400	340*474*(1300-1599)	4
	340*474*(1600-1899)	5
	340*474*(1900-2200)	6


三. Installtion:

(1).Install the bottom slide according POSITION CARD:

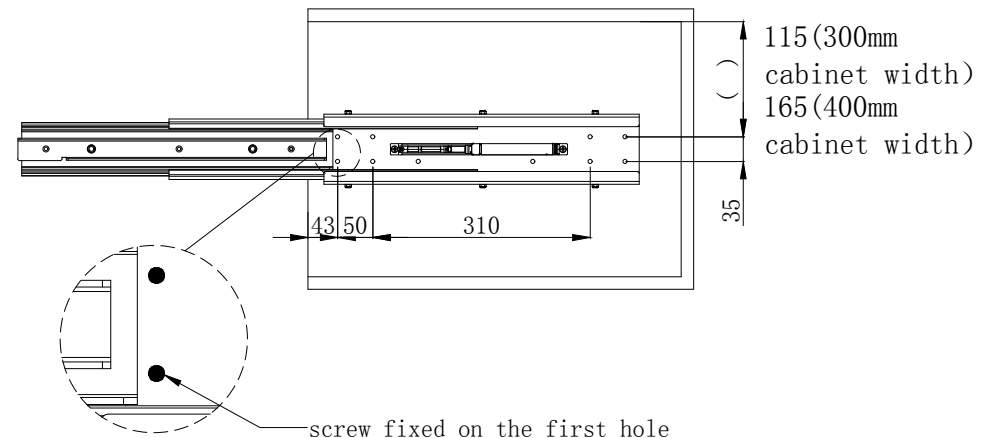


TALL UNIT INSTALTION

(2).Install the top slide according POSITION CARD:

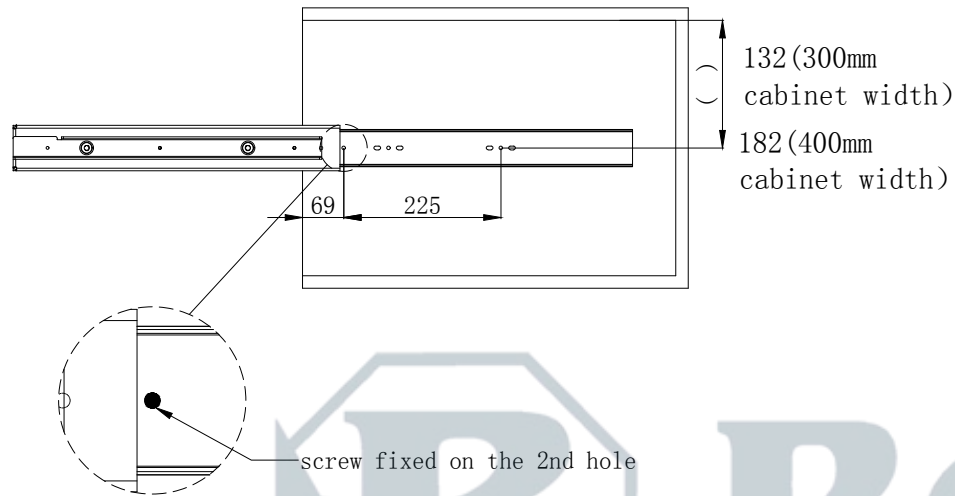


(3).Install the frame:


- ①put on the frame on the bottom slide,locked by screw F and gasket G;
- ②Adjust the height of the frame to match the cabinet, locked by screw F and gasket G
- ③Tighten the screw on Frame, make sure the frame balance

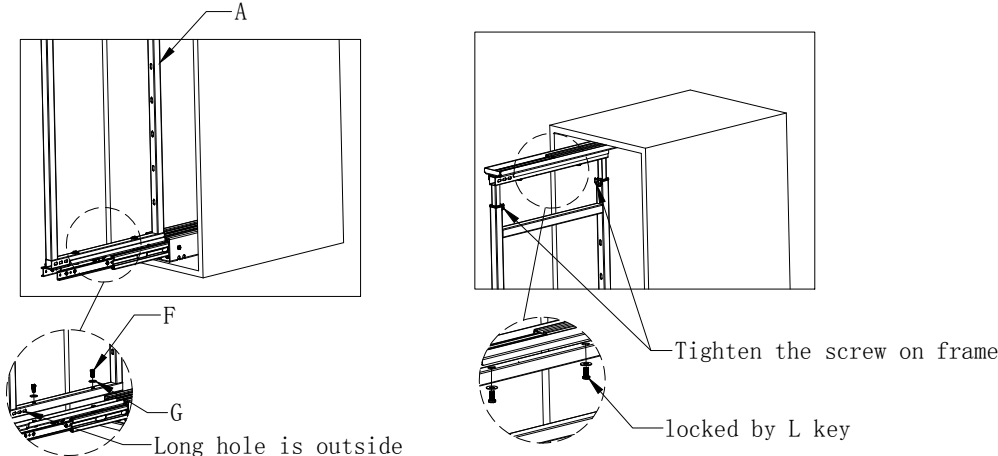

(4).install the door:

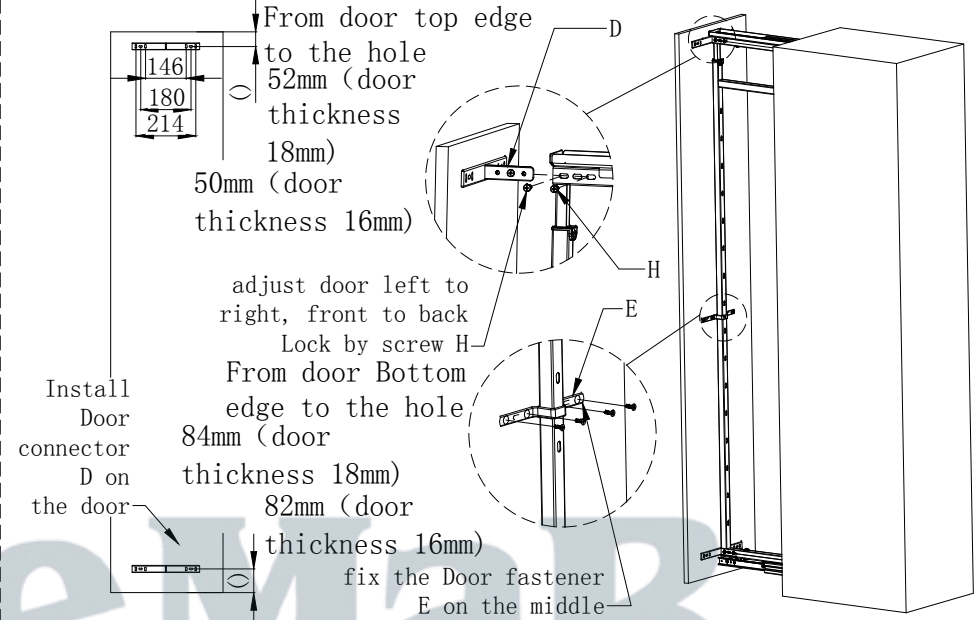

四.Put the basket on the frame:

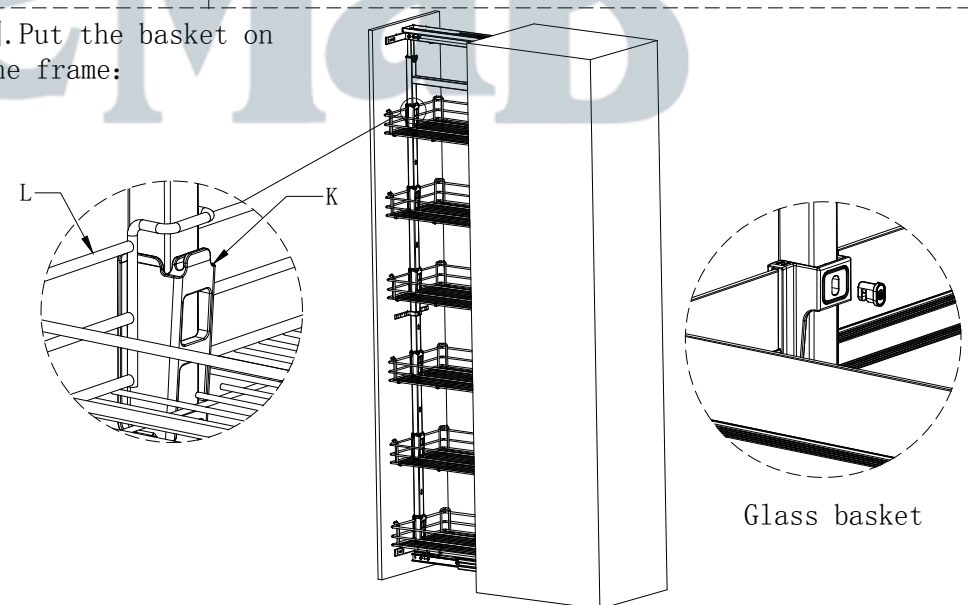

*slide the Tall unit several times till it work smoothly ,finish installtion